

# “ELECTRIC TRICKLE DUSTER”

## OPERATING INSTRUCTIONS

1. Attach a minimum length of 1 ½” diameter rockdust hose to discharge outlet
2. Fill hopper with dry rockdust. Prevent foreign objects such as rocks or paper from entering hopper.
3. Start “ELECTRIC TRICKLE DUSTER” briefly to aerate rockdust.
4. Turn “ELECTRIC TRICKLE DUSTER” off and add additional rockdust to completely fill hopper.
5. Slide hopper lid over hopper for operation.
6. Open discharge air valve to ½. Then turn “ELECTRIC TRICKLE DUSTER” on. Discharge rate is variable by opening discharge air valve for increase in discharge rate and closing for decrease.
7. “ELECTRIC TRICKLE DUSTER” will now run unattended until hopper is empty.

## OPTIMUM OPERATING POINTS

- A. Keep blower oil to proper level.
- B. Slide lid over Motor, Starter and Blower while filling.
- C. Do not run “ELECTRIC TRICKLE DUSTER” with discharge air valve closed for any length of time.
- D. Use minimum length of rockdust hose without bends or obstructions.
- E. Suspend discharge hose so rockdust will be carried in the air.